Gerni

Safety Instructions

for later use.



Ozito Industries Pty Ltd 1-23 Letcon Drive, Bangholme, Vic, Aus 3175 | Australia: 1300 162 689

Caution:

Read the instructions before using the machine 128351343 a (10.2018)

by the guarantee). that the directions of this instruction manu-

attempted by other than Gerni-trained

 that the product has not been exposed to abuse such as knocks, bumps or frost.

used for rental nor used commercially in any other way.

Safety instructions marked with this symbol must be observed to prevent personal injury or serious damage to property. Purpose and intended use The vacuum cleaner is suitable for private use only, e.g. for household, hobby workshops, car cleaning - sucking up non-hazardous dust and non-flammable liquids.

Warnings A This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards ensure that they do not play with the appliance. △ Cleaning and user maintenance shall not be made by children without supervision.

Instructions of use for vacuum cleaners Multi II series

Before first use of the machine, read the

instructions carefully. Save instructions

⚠ The vacuum cleaner is suitable for private use, e.g. for household, hobby workshops, car cleaning-sucking up non-hazardous dust and non-flammable liquids. A Never spray water on the upper section of the vacuum cleaner. Danger for persons, risk of short-circuiting.

⚠ The vacuum cleaner features a blow function. Do not blow the air out in the open space. Only use the blow function with a clean tube. Dust may be harmful to health.

△ Vacuuming up hazardous materials can lead to serious or even fatal injuries. The following materials must not be picked up by the vacuum cleaner: Hazardous dust: Hot materials (burning cigarettes, hot ashes etc.); Flammable, explosive, aggressive liquids (e.g. petrol, solvent, acids, alkalis, etc.); Flammable,

Always remove the electric plug from the socket before carrying out maintenance work on the machine or cable. \triangle No changes to the mechanical electrical or thermal safety devices must be made. A Never use the vacuum cleaner if the filter is not installed or if damaged. A Before using the vacuum cleaner make sure that the voltage shown on the rating plate of the vacuum cleaner corresponds to the voltage of the local mains power supply. It is recommended that the vacuum cleaner should be connected via a residual current circuit breaker. A The vacuum cleaner must not be used if the electrical cable or plug shows any sign of damage. Regularly inspect the cable and the plug for damage. If the power cord is damaged, it must be replaced by Gerni Service or an electrician to avoid danger before use of the vacuum cleaner is continued.

explosive dust (e.g. magnesium or aluminium

dust etc.). The list is not comprehensive. \triangle

Do not handle the electrical cable or plug with

wet hands. A Do not unplug by pulling on

cable. To unplug, grasp the plug, not the cable.

Service Please refer to our website at www. gerni.com.au for further instructions and information on use. • For Service, contact your local dealer.

The symbol indicates that this appliance may not be discarded together with household waste, but must be collected separately. Please dispose old appliances at the applicable collection point for recycling.

Warranty Conditions

Gerni quarantees vacuum cleaners for domestic use for 2 years. If your vacuum cleaner or accessories is/are handed in for repair, a copy of the receipt must be enclosed.

Guarantee repairs are being made on the following conditions: that defects are attributable to flaws or

- defects in materials or workmanship. (wear and tear as well as misuse are not covered
- al have been thoroughly observed.
- that repair has not been carried out or service staff.
- that only original accessories have been
- that the vacuum cleaner has not been

Batteries, lamps and wearing parts are excluded from the warranty.

In the event of defects arising during the duration of the warranty and of which Gerni is given notice. Gerni will, of their own choice, either repair the defects, replace the unit or refund the purchase price upon return of the unit. Opening the unit housing causes the warranty to become void. Further claims may not be made on the basis of the warranty. The statutory warranty rights of the customer remain unaffected Manufacturer warranty claims shall be made to the manufacturer. Statutory warranty rights also remain unaffected in this case.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Gerni vacuum cleaners for domestic use are warranted for 2 years from the date of purchase by:

Ozito Industries Pty Ltd 1-23 Letcon Drive, Bangholme, Vic, Aus 3175. Phone: 1300 162 689 E-mail: Customerservice@gerni.com.au

Find your local service agent here: http://www.gerni.com.au.

The benefits under this warranty are in addition to your national law of sale.

























